




HP G62 347NR Battery Replacement

This guide will show users how to replace the device battery.


Written By: McKenzi Morris

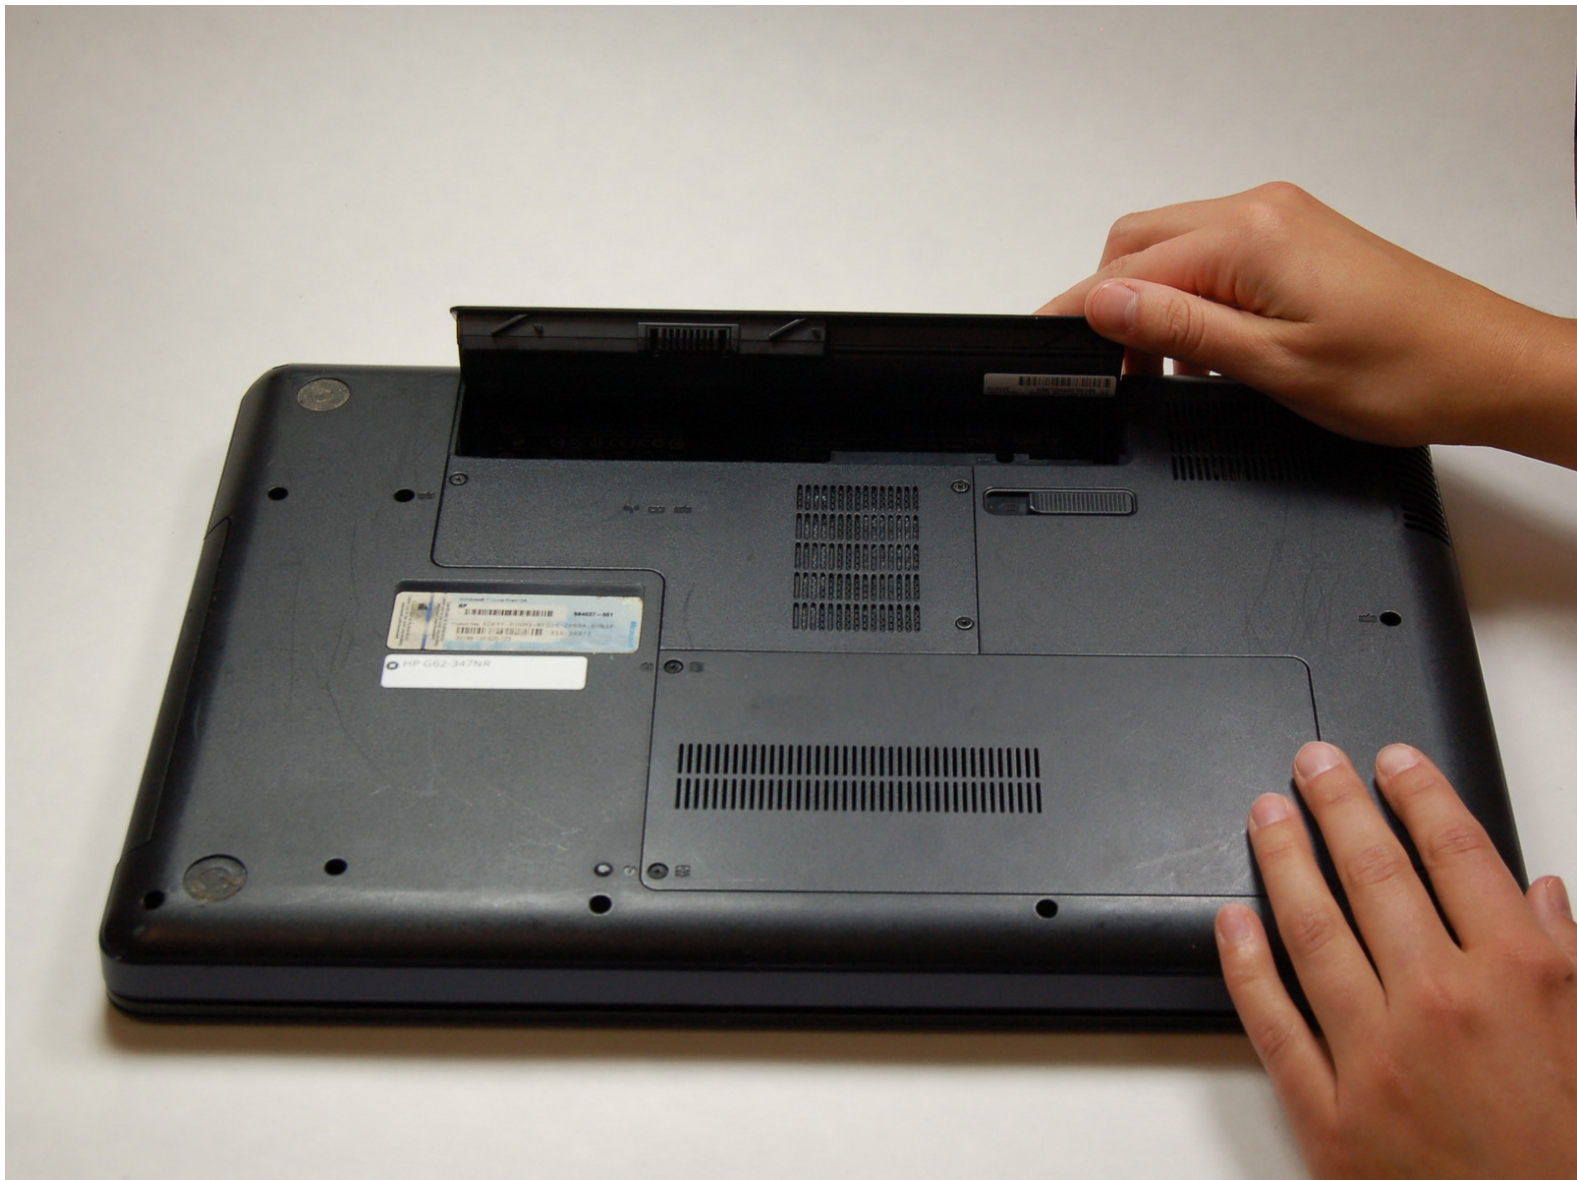


INTRODUCTION

This guide will teach users how to replace an HP G62-347NR battery.

Step 1 — Battery

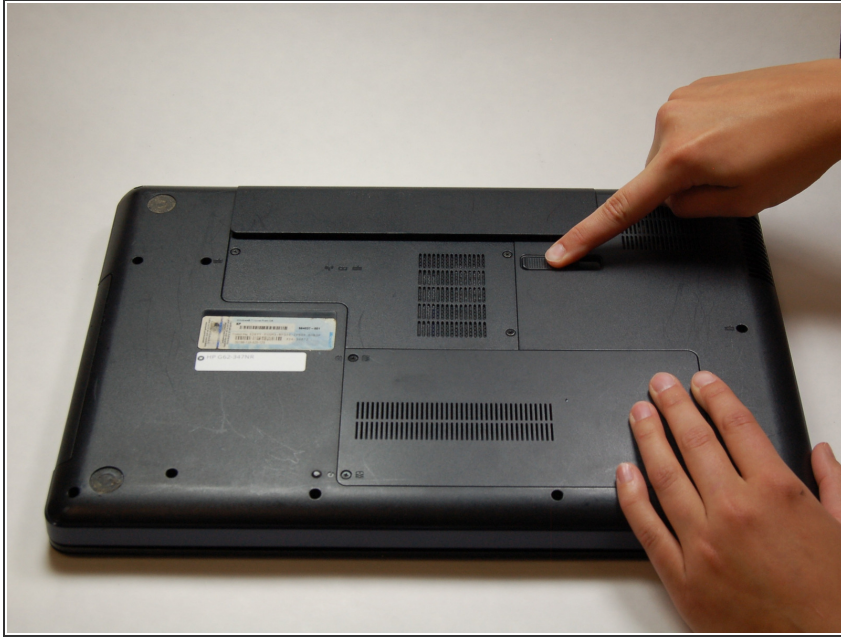

 Make sure the device is turned off before removing the battery to avoid loss or corruption of files.

- Turn the device over so the bottom is facing up.
- Slide the battery release to the left until you hear a click.
- Once you hear a click, the battery will have been released from the battery compartment.

Step 2



- Remove the battery, carefully, from the compartment.

To reassemble your device, follow these instructions in reverse order.